ASSEMBLY INSTRUCTIONS

Office Boffins

A-1 PC

B-5 PCS

C-1 PC

D-1 PC

E-1 PC

F-2 PCS

R   L

G-6 PCS
M6×35mm

PRE-INSERTED

H-6 PCS
D6×D14×1.2mm

PRE-INSERTED

I-1 PC
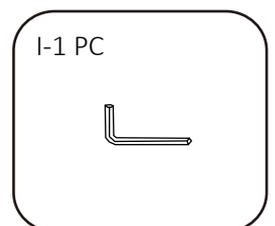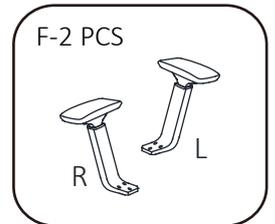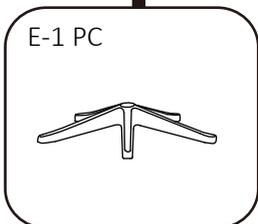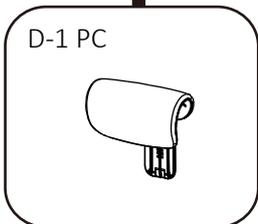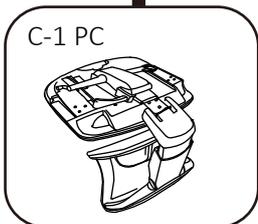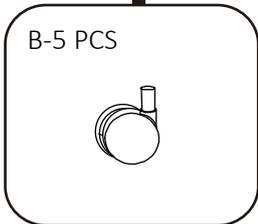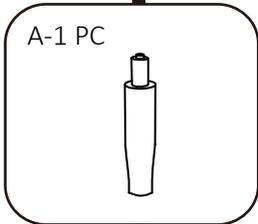
COREM001

PLEASE NOTE:
The screws "G" and part "H" are pre-inserted into their correct holes to prevent them from being lost in transit. Please remove them before assembly using the allen key provided.

cm
0 1 2 3 4 5 6 7 8 9 10
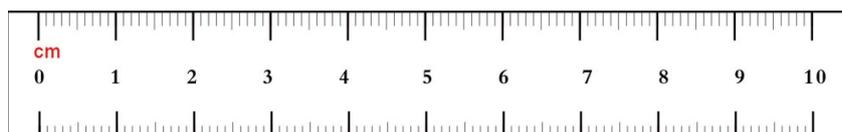
Do not tighten bolts fully until you have completed assembly.
DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS.
TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.

❶

A

E

B×5

❷

G×3

G×3

H×3

H×3

F$_L$

F$_R$

C

❸

❹

D
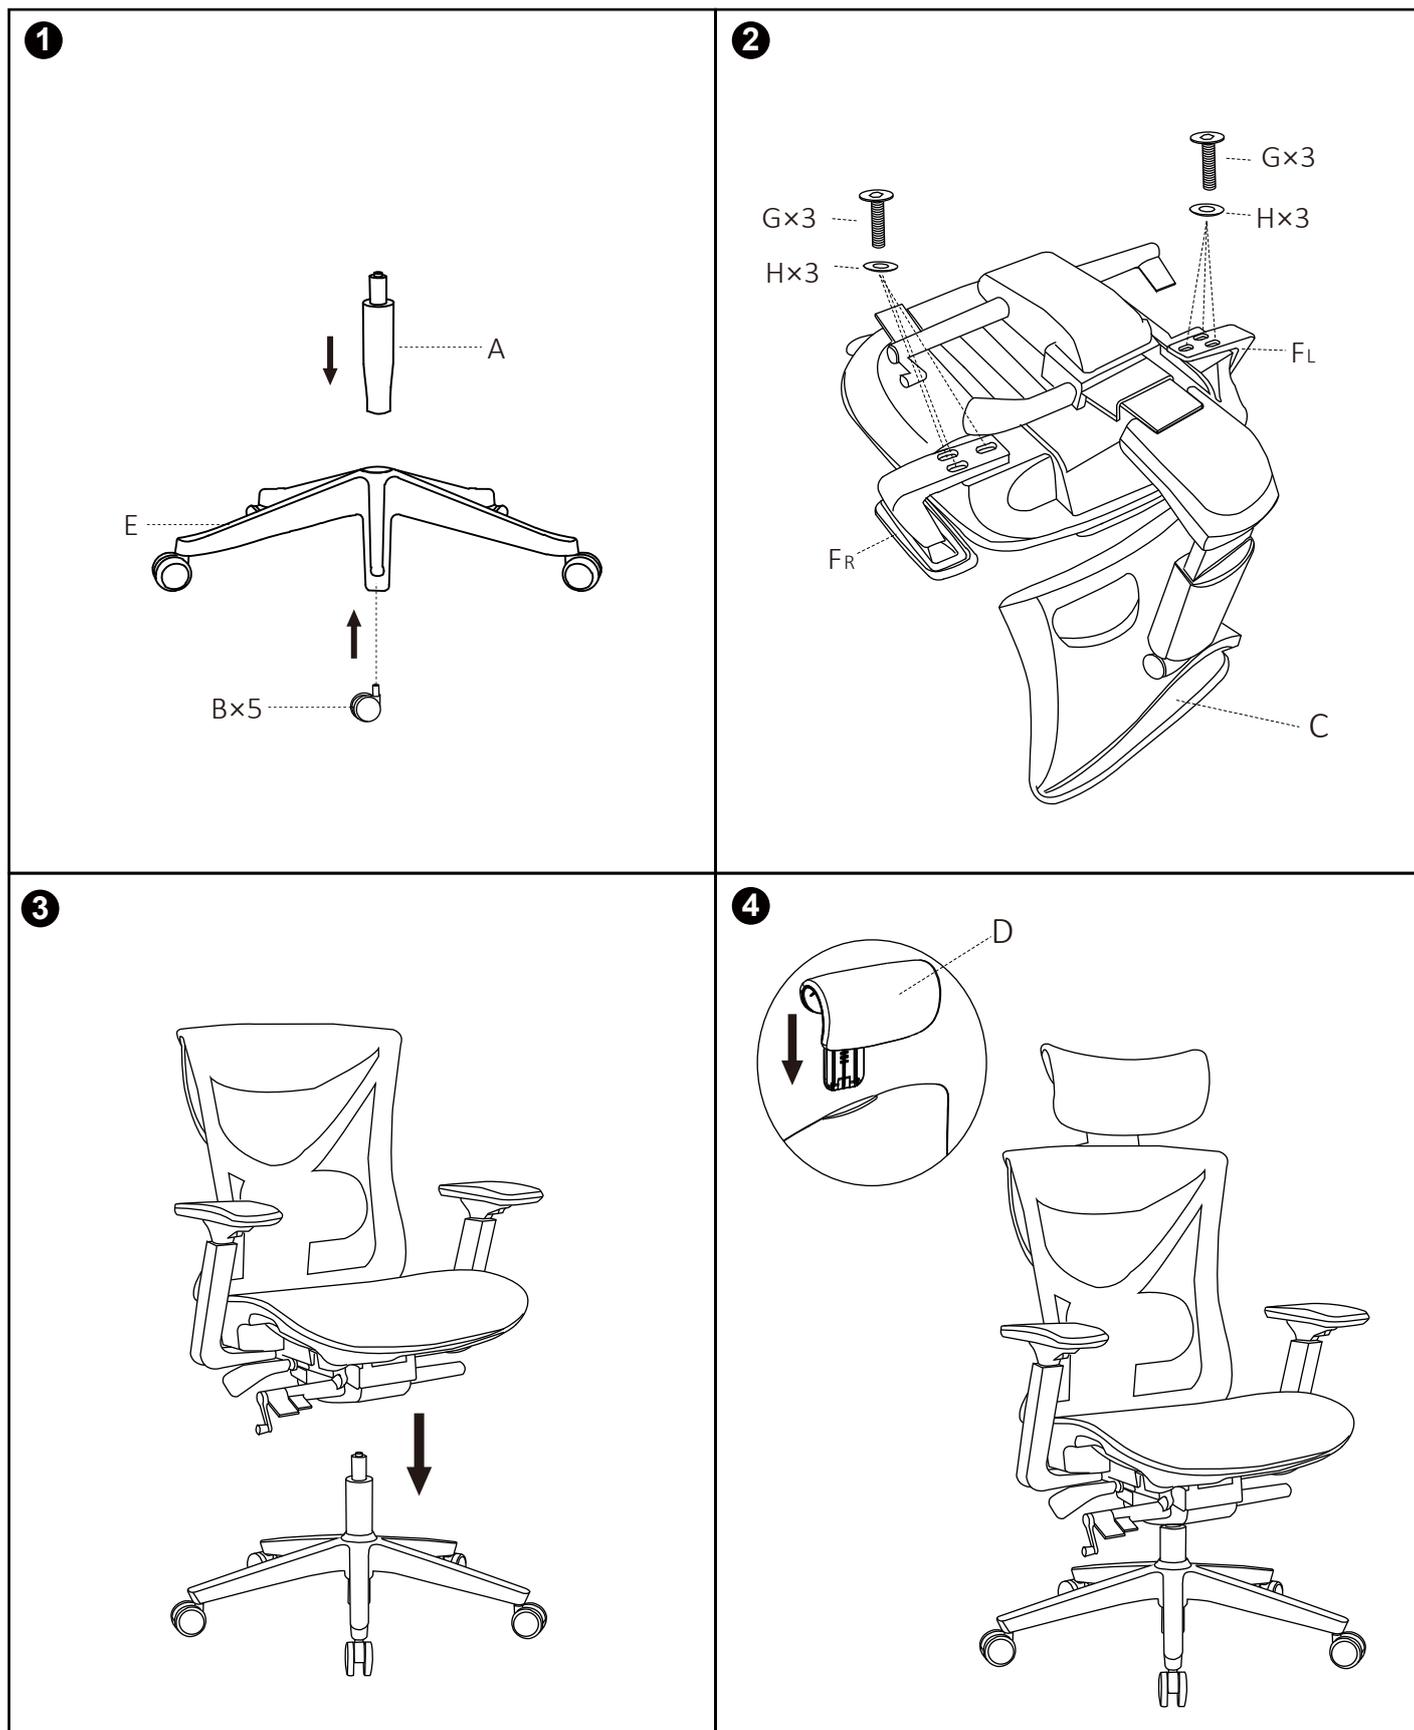
WARNING

- DO NOT STAND ON THIS CHAIR.
- DO NOT USE THIS CHAIR AS A STEP LADDER.
- USE THIS PRODUCT FOR SEATING ONE PERSON AT A TIME ONLY.
- DO NOT USE THIS CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED.
- AT LEAST EVERY 6 MONTHS, CHECK ALL BOLTS, SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT.
- IF PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USING THIS PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORISED PARTS.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.
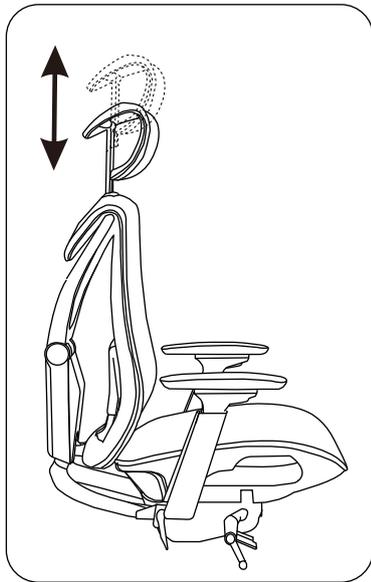
Height adjustable headrest
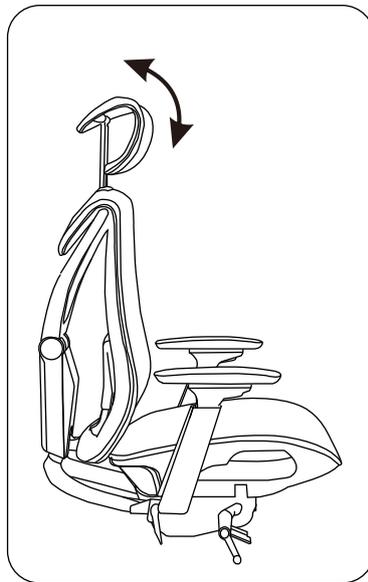


45° adjustment
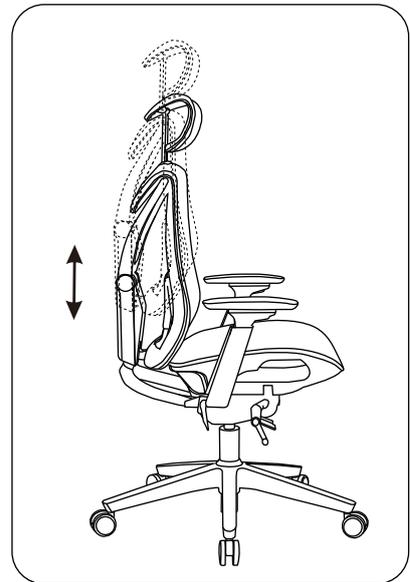
Height adjustable backrest
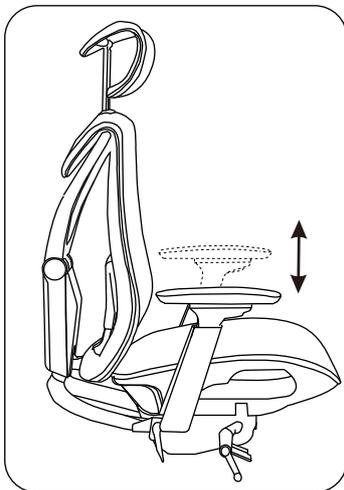
Height adjustable arms
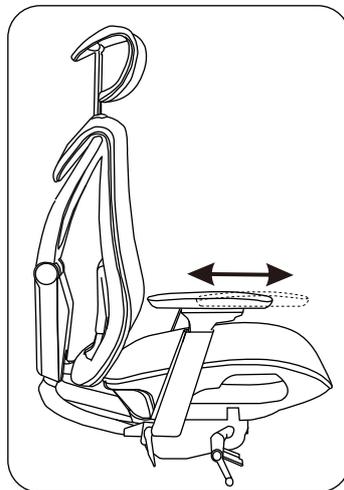

Sliding arm pads
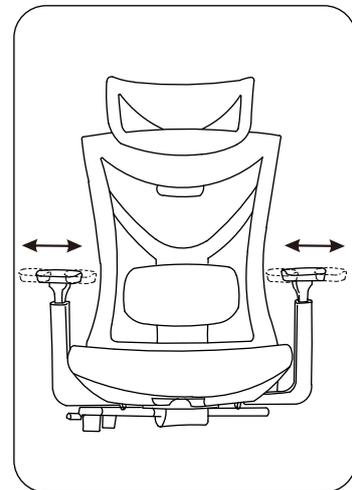
Pivoting arm pads
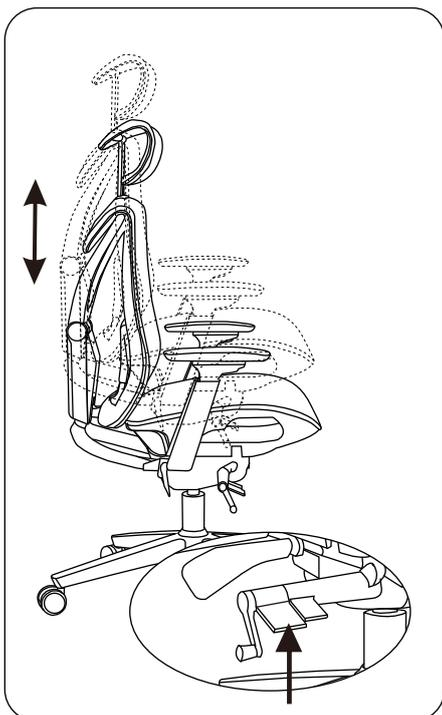
Seat Height Adjustment, lift handle to raise / lower seat height.
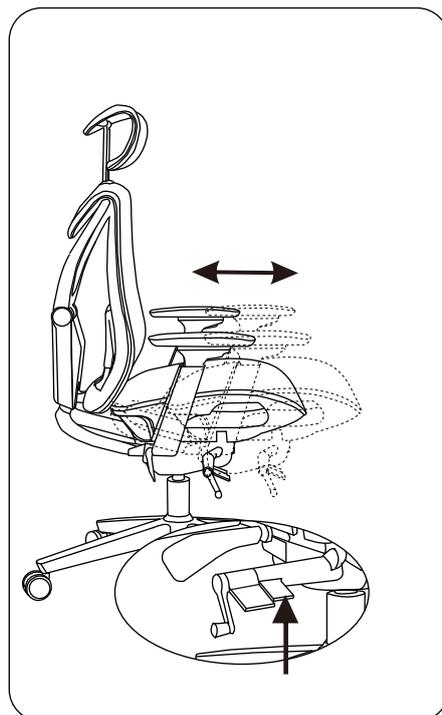

Seat Depth Adjustment, push lever down to adjust seat depth.
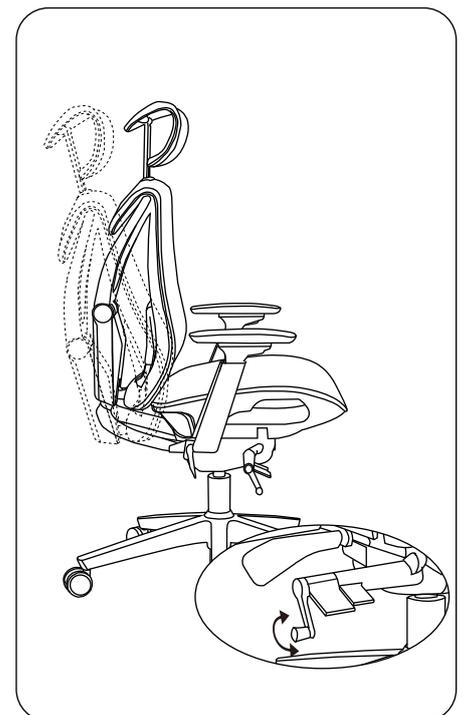
Weight Tension Adjustment, turn clockwise to increase resistance, anti-clockwise to decrease.
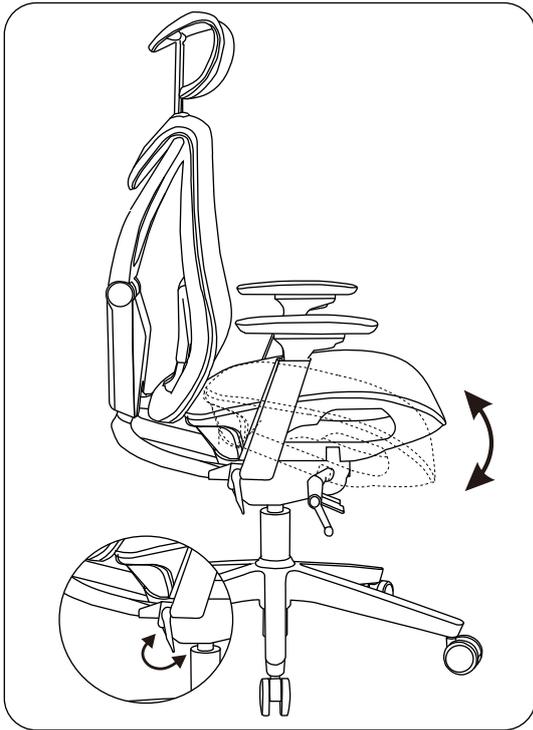
Seat Angle Adjustment, turn clockwise to release, tilt seat pad forward then turn anti-clockwise to lock into the pre-set position. (approximately 5 degree tilt).
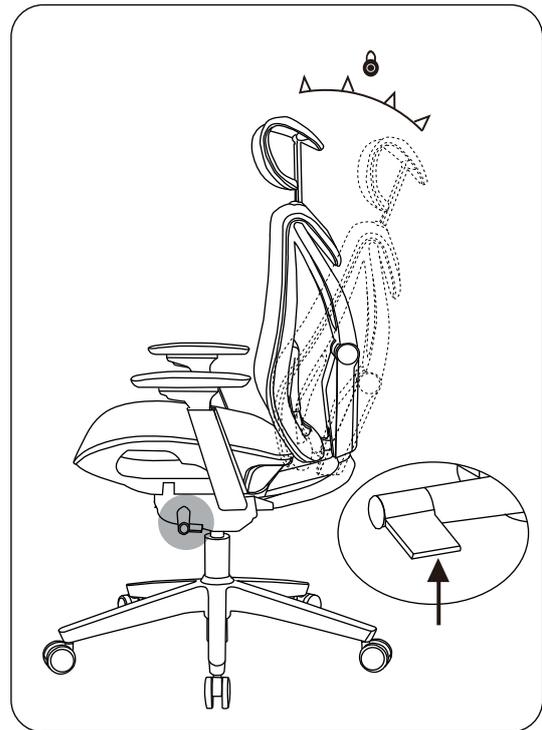
Synchronised Tilt Adjustment, push handle down to release tilt, lift handle up to lock in postion.
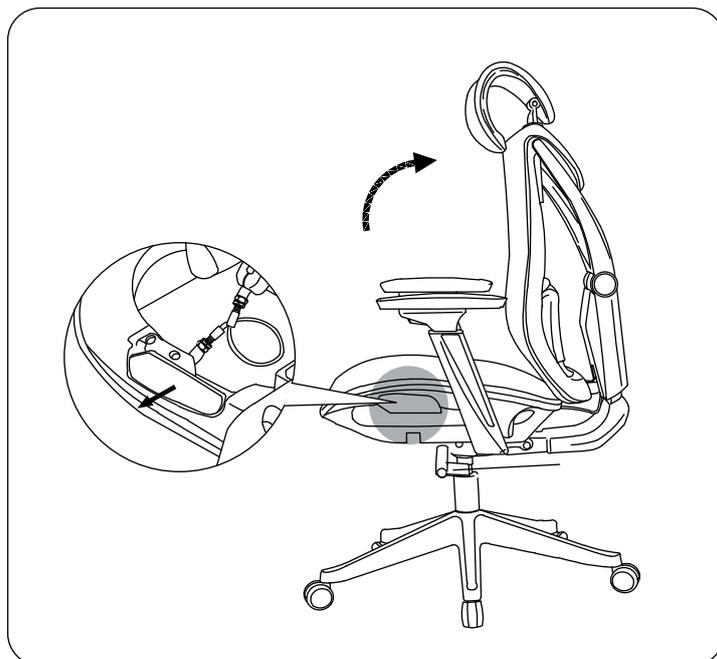
2 Position Back Angle Tilt, pull the lever out to release the back angle tilt. Pull out once and lean back into the 1st position. Pull out again to lean back into the 2nd position.