
## ASSEMBLY INSTRUCTIONS





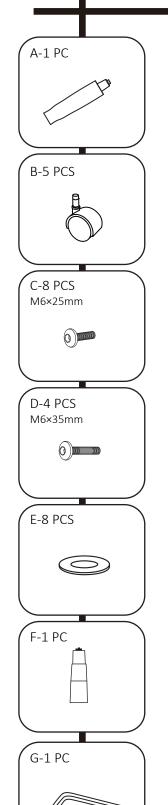

## **SATM001**

cm 0 1 2 3 4 5 6 7 8 9 10 Do not tighten bolts fully until you have completed assembly. DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS. TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.

