
ASSEMBLY INSTRUCTIONS



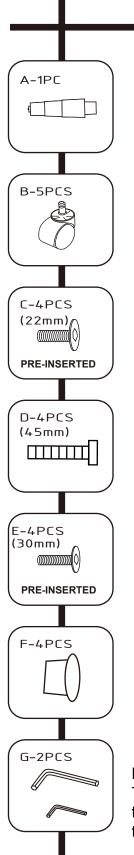



PEXECL001


PLEASE NOTE:

The screws "C" and "E" are pre-inserted into their correct holes to prevent them from being lost in transit. Please remove them before assembly using the allen key provided.

IIIII	ШШ	Ш	ШП	ш	ШПП	ШПП	шПпп	ШШ	ШПП	Ш
0	1	2	3	4	5	6	7	8	9	10
Inni	mlmi	milan	ım l ım	ımlını	mılım	mulmu	milmi	mlmi	nnlnni	hini

Do not tighten bolts fully until you have completed assembly. DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS. TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.

Tie the pipe with self-adhewise tape to fix the air bag on the seat

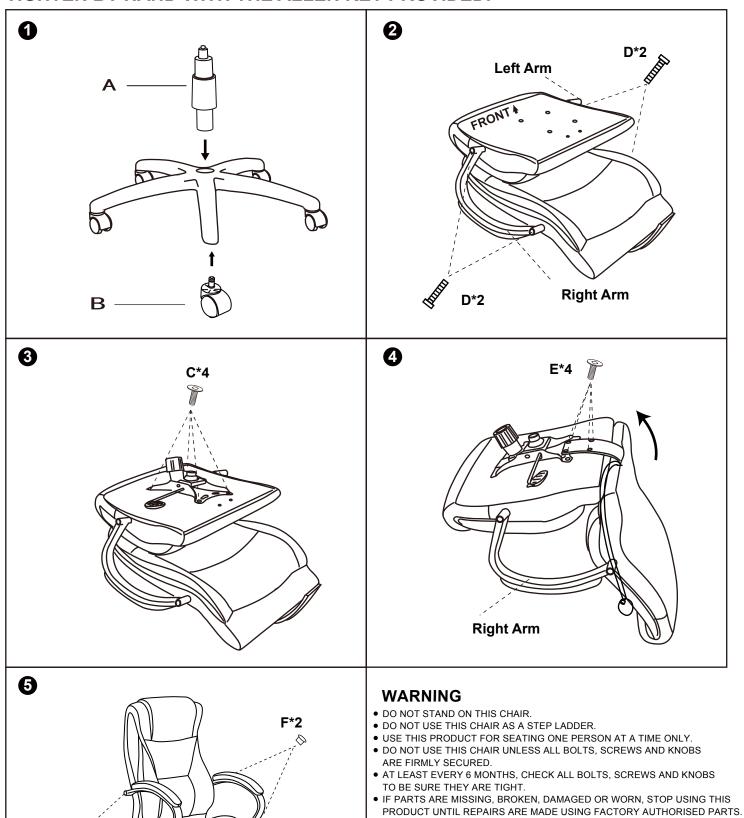

• FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.