
## ASSEMBLY INSTRUCTIONS







## Office Boffins

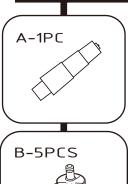







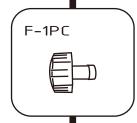






**ULT4001** 

## **PLEASE NOTE:**

The screws are pre-inserted into their correct holes to prevent them from being lost in transit. Please remove them before assembly using the allen key provided.



## Do not tighten bolts fully until you have completed assembly. DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS. TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.

